




GRØM MU STANDS QUICK REFERENCE GUIDE

This instruction sheet will cover all versions of our various MU stands.

This is a basic preliminary instruction sheet. Photos to come soon. Please feel free to contact us with any questions.

- Most MU stands do not have any mounting pins. Carefully remove them from the supports, and true up the bottom on a flat piece of fine sandpaper. It will not take much, just one or two swipes. Locate the spot you wish to install them on the model, and drill a small “relief” hole on the deck – this is simply to act as a spot for glue to settle in. Using canopy glue, install your MU stand. Wipe off any excess that squeezes out with a toothpick. After it is fully dry, you can further reinforce the stand with some CA applied to the backside with a piece of small wire.
- Pilot mounted MU receptacles and plugs do have mounting pins. The pins are 1.2mm (.047”), however this will be +/- with printing so you may need to go up a size or two drill bit. Do not force anything – always increase your hole size.
- MU Cables – Both our MU cable kit and various fixed plug sets include wire to use as the MU cable. All holes are now pre-formed. If you have an older kit that does NOT have the pre-drilled hole, please contact us. After installing the stands to the deck/pilot, you want to pre-shape your MU cable. You do not want it to pull on the stands or take any effort to install, so as to not break the stand off. The typical MU cable is around 7’ long.
- Early switcher MU stand w/light (#2006) has an offset pilot hole in the base. Clean this hole out with a fresh/sharp .025” drill bit. Install a piece of included wire. MU stand should sit roughly .09”/2.3mm off the deck.
- #2009 deck mounted dummy plug stand – I recommend installing a piece of .012” wire (not included) as a reinforcement for the stand to rest against, as there is not much glue surface to attach them.
- #2010 can style MU cable holder – On the backside is a small recess. Drill this out with a .015” drill bit and install a chunk of included wire. Drill a corresponding hole in the handrail stantion and install. Trim any excess from the back.

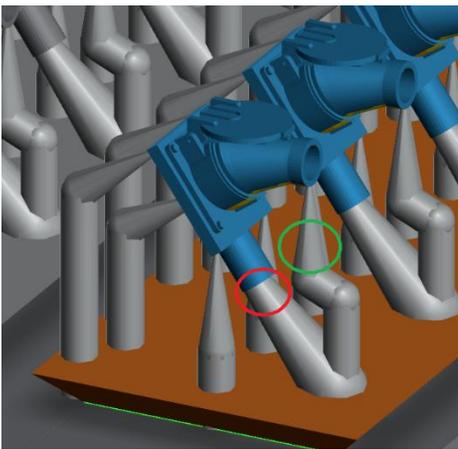

- #2028 deck mounted dummy plug w/plugged in cable. This stand has a .75mm/.030” mounting pin on the base. This pin is very delicate as there is not a lot of surface area where it attaches to the stand. Locate and drill your holes for the pin and install with canopy glue. After glue dries, apply some CA to the rear for extra reinforcement. After installing the stands to the deck/pilot, you want to pre-shape your MU cable. You do not want it to pull on the stands or take any effort to install, so as to not break the stand off. The typical MU cable is around 7’ long.